## SETTING FREQUENCY OF CLEANINGS

THE DISPENSING PUMP BOARD CONTAINS THE FOLLOWING:

1. SET SELECTOR SWITCH FOR THE FREQUENCY OF CLEAN CYCLE DESIRED. THE FOUR POSITIONS ARE AS FOLLOWING:

